 


UK SKU: CA00198

www.decotel.com

EU SKU: CA00198E

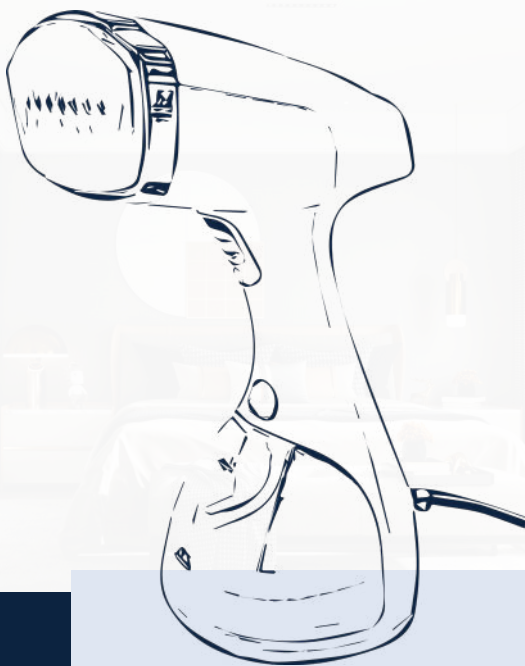

INSTRUCTIONS

Handheld Hotel Steamer

Vapeur à Main

Handdampfer

Vaporizador Portátil



Please read these instructions carefully before use

Content

03 - 08	EN - Instructions for use
09 - 13	FR - Instructions d'utilisation
14 - 19	DE - Gebrauchsanweisung
20 - 25	ES - Instrucciones de uso
30 - 35	PL - Instrukcja obsługi

Features

1500W, 220-240V, 50/60Hz

Dimensions: 160 x 118 x 240mm

3m cable

Steam output: 25±3g/min

300ml water tank

Grey colour, ceramic-coated soleplate

Press-button control panel

30s heat-up with aluminium heater

Leak-proof for vertical/horizontal steam

 
 
Two steam settings, low-water protection

Detachable, visible water tank

Heating & steam-ready light

Includes 2 brushes

Details

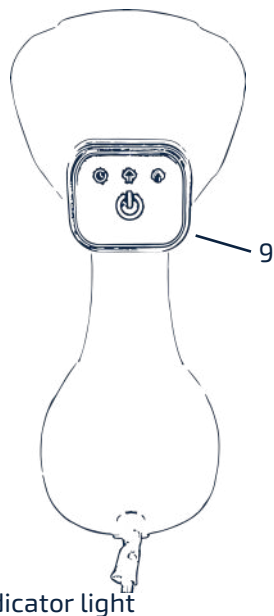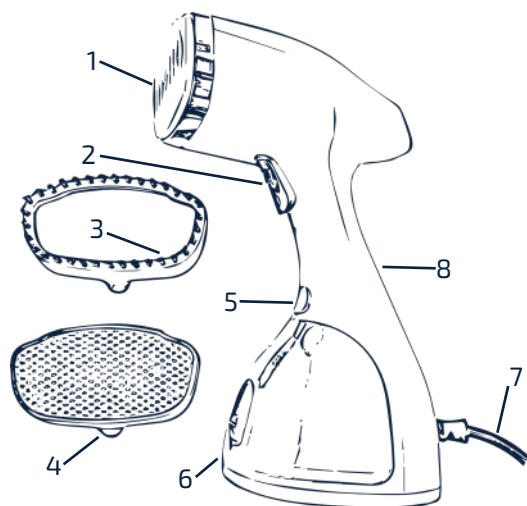

- 1. steamer head
- 2. steam switch
- 3. fur brush
- 4. lint brush
- 5. water tank button
- 6. water tank
- 7. power cord
- 8. handle
- 9. controls / power indicator light

Instructions

1. Introduction

- This steamer is designed for garment steaming and can also assist with cleaning.
- Ideal for various settings, including homes, hotels, and the clothing, wedding, and curtain industries.
- Safe, economical, and easy to use. Effective on silk, wool, cotton, and blended fabrics.
- Features cleaning, anti-wrinkle, and dust removal functions.

2. Before First Use

- **Inspect the Water Tank** - Ensure the water tank is secure, clean, and free of any residue or debris before filling it.
- **Run a Test Steam Cycle** - Fill the tank with water, turn on the steamer, and run a short test steam cycle to clear any residues from manufacturing.
- **Check Nozzle Attachment** - Attach and ensure the nozzle is securely fitted to prevent any steam leakage during use.

3. Safety and Protection

- **Thermostat:** Maintains temperature when the water tank is empty.
- **Thermal cut-off:** Automatically cuts power if the temperature exceeds safe levels.
- **Warning:** Do not point steam at people or animals to avoid burns.

4. Warnings

- Only use accessories when the steamer is cool.
- Do not submerge the steamer in water or rinse it under the tap.
- Do not disassemble or repair the machine yourself.
- Use only drinking water, and distilled water for delicate fabrics.
- Ensure voltage matches your local supply and use a 30mA leakage protection switch.

Instructions

5. Product Installation

5.1 Adding Water to the Water Tank:

- Press the release button on the water tank and remove it from the steamer body.
- Open the rubber seal located on the water tank.
- Fill the tank with drinking water, ensuring it does not exceed the maximum water level indicated on the tank.
- Close the rubber seal securely to prevent any leaks, and reattach the water tank to the steamer until it clicks into place.

5.2 Installing Accessories:

- Choose the appropriate accessory (fur brush or lint brush) based on the type of fabric or cleaning required.
- To attach the accessory, align it with the iron's head and push it firmly into place until it is securely fastened.

6. Using the Steamer

- Add water to the tank as described above.
- Plug in the power cord.
- Press the power button. The indicator light will flash red while the steamer heats up.
- After 30 seconds, the light will turn solid red, indicating the steamer is ready to use.
- Select the steam level by pressing the control button. The selected level will be shown by a green light.
- If the water tank is empty, the steamer will automatically shut off after 45 seconds and the light will flash red.

7. Steam Lock Feature

- For continuous steam, slide down the steam lock switch. Slide it back up to stop the steam.

8. After Use

- Press the power button for 2 seconds to turn off the steamer.

Instructions

- Unplug the power cord and allow the steamer to cool down before storing it.
- Store the steamer in a dry place, away from children's reach.

8. Additional Notes

- Keep away from flammable or explosive materials.
- Only use the steamer indoors.
- If damaged, stop using immediately and contact a professional for repairs.
- Regularly clean the surface with a dry cloth—avoid solvents like alcohol or petrol.

Troubleshooting

1. Machine Does Not Produce Steam

- Ensure the water tank is properly filled and securely attached.
- Check if the indicator light is green.
- Keep the steamer in a vertical position.

2. Water Leaking from the Tank

- Ensure the water level does not exceed the maximum mark.
- Check that the water tank and stopper are securely in place.
- Always keep the steamer upright during use.

3. Loud Hum or Pumping Sound

- Check the water level. If it's low or empty, refill the tank promptly.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com