

UK SKU: CB00260 **UK SKU:** CB00261
EU SKU: CB00260E **EU SKU:** CB00261E

www.decotel.com

Brushed Steel

Titanium Black



INSTRUCTIONS

Talia Kettle 0.6 Litre

Bouilloire 0,6L
0,6L Wasserkocher
Hervidor de 0,6L



Please read these instructions carefully before use

Content

03 - 08 EN - Instructions for use

Features

Capacity: 0.6 Litres

Low 750W Energy Usage

220-240V, 50/60Hz

Strix Control

Double Walled Insulation

Button-Operated Lid


Boil-Dry and Overheating Protection

360° Rotational Base

Auto Cut Off

Concealed Heating Element

Details

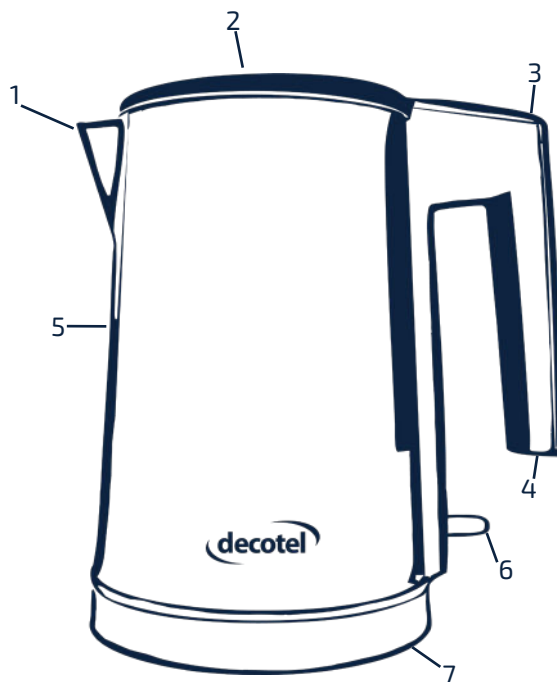

1. spout
2. lid
3. button to open lid
4. handle
5. kettle
6. on/off switch
7. 360° rotational power base

Instructions

1.0 Introduction

- Designed specifically for hotels and hospitality, this 0.6L kettle provides a convenient, compact solution for boiling water.
- It combines safety, ease of use, and durability, making it ideal for guest rooms.
- Please follow all safety and maintenance instructions to ensure long-lasting performance.

2.0 Before First Use

- Clean the kettle by boiling a full capacity of water (0.6L) once and discarding it.
- Wipe the exterior with a damp cloth.
- Always check that the appliance is free from visible damage before use.

3.0 Important Safety Notes

3.1 Electrical Safety

- Ensure the voltage matches the appliance rating (220–240V).
- Do not use if the power cord or plug is damaged. If damaged, have it replaced by a qualified professional.
- Unplug the kettle when not in use or during cleaning.

3.2 Operational Safety

- Always use the kettle with the provided base.
- Never operate the kettle without water inside to avoid damaging the heating element.
- Avoid overfilling to prevent water spillage during boiling.
- Keep out of reach of children under eight years old.

3.3 Handling Precautions

- Avoid touching hot surfaces; use the handle and lid release button.
- Do not open the lid while water is boiling to prevent scalding from steam.



Instructions

- Pour boiling water slowly to reduce the risk of burns.

4.0 Usage Instructions

4.1 Filling the Kettle

- Remove the kettle from its base.
- Open the lid using the release button or fill through the spout.
- Do not exceed the maximum water level.

4.2 Boiling Water

- Place the kettle on its base and ensure the lid is securely closed.
- Plug into a power outlet, then press the power switch to start boiling.
- The kettle will automatically shut off once the water reaches boiling point.

4.3 Pouring Water

- Lift the kettle carefully using the handle.
- Pour water slowly to avoid spills and burns.

4.4 Reboiling

- Press the power switch down again to restart boiling if needed.

5. Cleaning & Maintenance

5.1 General Cleaning

- Unplug the kettle and allow it to cool before cleaning.
- Wipe the exterior with a soft, damp cloth.
- Never immerse the kettle or its base in water.

5.2 Descaling

Instructions

- To remove mineral deposits:
- Fill the kettle with 3 cups of white vinegar and enough water to cover the base. Leave overnight.
- Empty, then boil clean water to rinse thoroughly. Repeat if necessary.

6. Disposal

- Dispose of the kettle responsibly, adhering to local electronic waste regulations.

Troubleshooting

1.0 Kettle Does Not Turn On

- Check the power connection and outlet functionality.
- Ensure the power switch is free from obstructions.

2.0 Overheating or Automatic Shutoff

- If the kettle overheats or operates without water, it will shut off automatically.
- Allow it to cool before refilling and restarting.

3.0 Water Spills or Lid Issues

- Ensure the lid is securely closed during boiling.
- Avoid overfilling the kettle.

For persistent issues, discontinue use and consult a qualified technician or the manufacturer.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com